

USB to Serial Adapter

User Manual

Ver. 2.00

**All brand names and trademarks are properties of their
Respective owners.**

Features and Benefits

- Smart USB to RS-232 (DB 9-pin male serial port) interface
- Supports various serial devices modems, PDAs, cellular phones, digital cameras, card readers, and more
- Easy Plug and Play Installation
- Supports serial transmission rate up to 230400bps
- No IRQ resource required
- Bus Powered – no separate power supply or battery required
- Supports Windows® 2000, XP, Server 2003 and Vista

Package Contents

- 1 x USB to Serial Adapter
- 1 x Driver CD
- 1 x User Manual

System Requirements

- Windows® 2000/XP/Server 2003/Vista
- USB 1.1 or higher port

Driver Installation

For Windows® 2000/XP/Server 2003

1. Don't plug in the USB to Serial Adapter to the USB connector of your computer.
2. Please insert the CD driver bound with USB to Serial Adapter into your CD-ROM Drive.
3. At the Windows desktop click **Start**, then **Run**.
4. Type **D:\USBRS232\Windows\Setup.exe**, then click **OK**.
(Change **D:** to match your CD-ROM drive letter)
5. Follow the on-screen instructions to complete the installation.
6. Plug USB to Serial Adapter into your computer's USB port.
7. Open "Device Manager" under System Properties and check if there is the device you install under "**Prolific USB-to-Serial Comm Port...**".
8. Now the USB to Serial Adapter is ready to use.

For Windows® Vista

1. Don't plug in the USB to Serial Adapter to the USB connector of your computer.
2. Please insert the CD driver bound with USB to Serial Adapter into your CD-ROM Drive.

3. At the Windows desktop click **Start**, then **Run**.
4. Type **D:\USBRS232\Windows\Vista\Setup.exe**, then click **OK**.
(Change **D:** to match your CD-ROM drive letter)
5. Follow the on-screen instructions to complete the installation.
6. Plug USB to Serial Adapter into your computer's USB port.
7. Open "Device Manager" under System Properties and check if there is the device you install under "**Prolific USB-to-Serial Comm Port ...**".
8. Now the USB to Serial Adapter is ready to use.

Changing COM Port Number

Some serial devices need a special COM port in order to work. If your serial device works properly, do not change this setting.

1. From the **Device Manager** window double click **Ports(COM & LPT)**, then double click the **Prolific USB-to-Serial Comm Port** you want to change.
2. Click **Port Settings** tab and click **Advanced...** button.
3. Click the down arrow that is next to the **COM Port Number** box, select a COM port that is not in use, then click **OK**.
4. Click **OK**, then close **Device Manager** to save the changes.